



1. Determine post placement and post spacing.
2. Mark base anchor hole locations.
3. Mount posts level and plumb; shim as needed.



4. Measure between post spools, top and bottom.
5. Trim two pieces of slotted tube to length - one for bottom, one for top.



6. Slide lower spool covers onto slotted tube
7. Place bottom slotted tube between bottom spools and slide covers to post, tighten set screws.

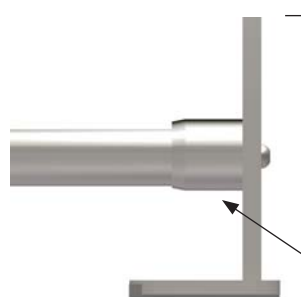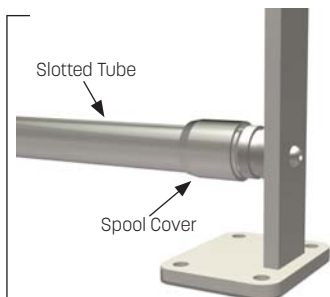

Spool cover in place; tighten set screw.


8. Place rubber gasket on bottom edge of glass panel and place in lower slotted tube.



9. Place rubber gasket on top edge of glass.
10. Place top slotted tube on glass.



11. Slide upper spool covers to posts.

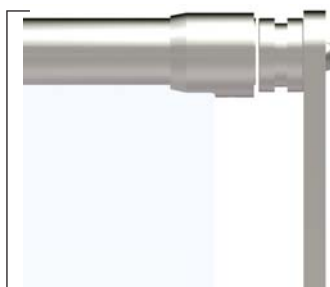

12. Slide upper spool covers to posts and tighten screws.



12. For stand-alone end posts, clips are recommended to maintain end post rigidity.



COLLABORATIVE METAL WORKS



P.O. Box 423, Butler, WI 53007-0423
10600 West Brown Deer Road, Milwaukee, WI 53224

1.888.243.6914 Fax 414.214.0450

info@mailwagner.com shopwagner.com

